



Thermostat Operation: Andover


1. To View Space Temp, Time, or Outside Air Temp, Press the **Display** button.

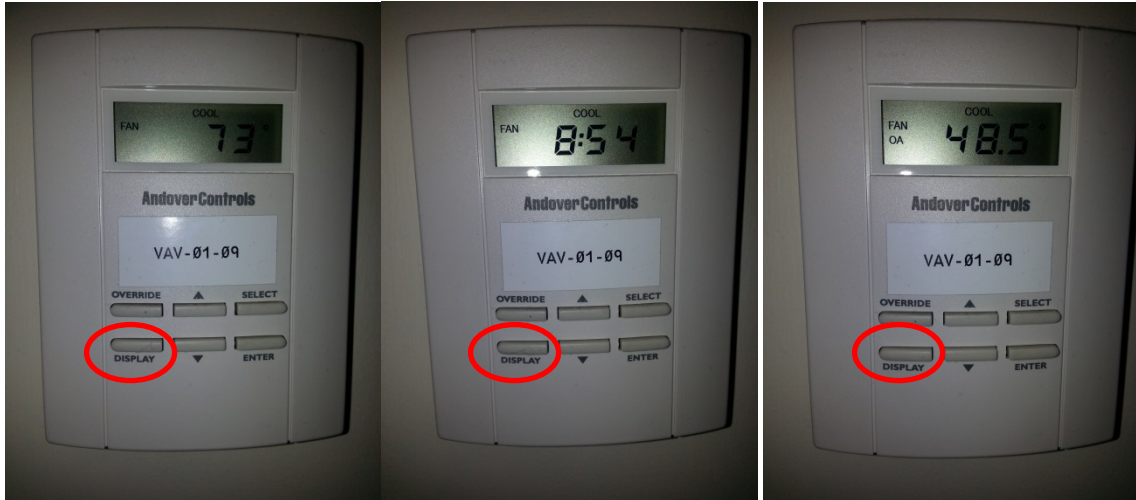

2. To Request HVAC for **24 Hours**, Press the **Override** button. Notice that the word **FAN** will appear on the left side of the display. Pressing the **Override** button again anytime within the 24 hours will reset the clock, and provide 24 more hours of HVAC.

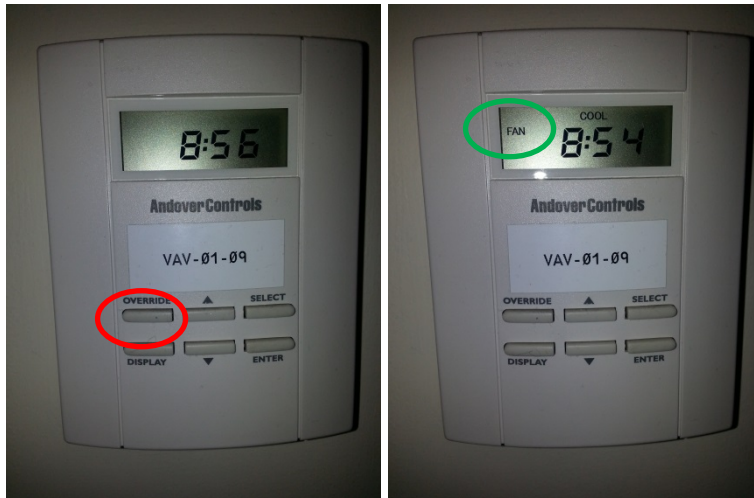

- To change the setpoint at any time, simply push the [up](#) or [down arrow](#). Notice that the word **Setpoint** will appear in the upper right corner. The first push will display the current setpoint, and any push thereafter will adjust the setpoint either up or down based on the arrow direction. The standard setpoint range is from 68 to 74.

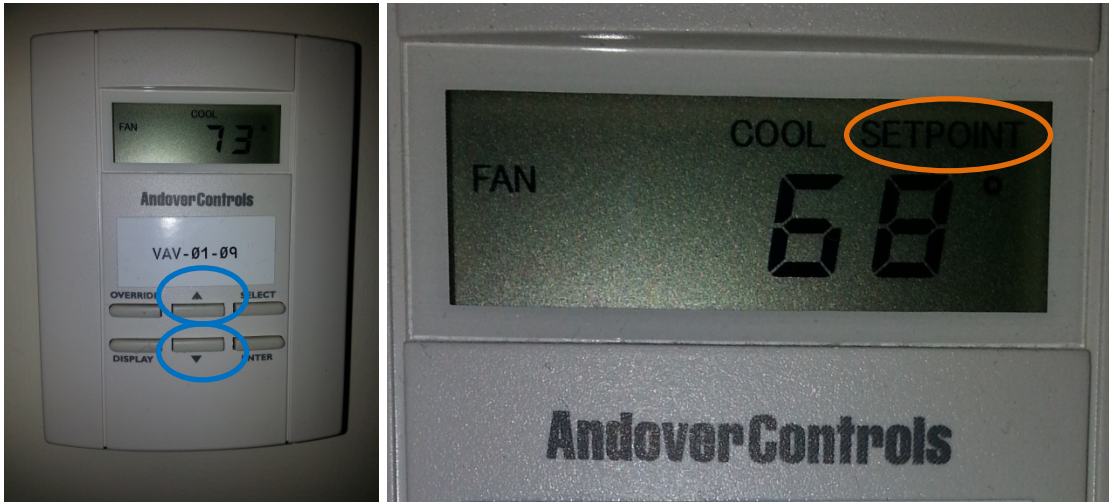


- When finished, either press [ENTER](#) or wait 15 seconds, and the display will show the space temperature.



Thermostat Operation: Automated Logic (Kitt Central and Kitt West)

1. To View Space Temp or Outside Air Temp, Press the **INFO** button.

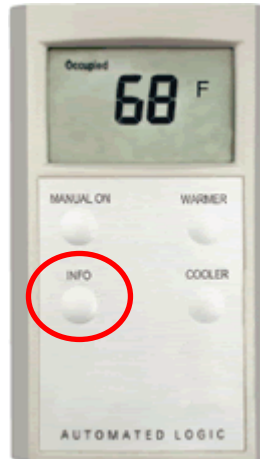

2. To Request HVAC for **24 Hours**, Press the **MANUAL ON** button. Notice that the word **Unoccupied** will change to **Occupied**. Pressing the **MANUAL ON** button again anytime within the 24 hours will reset the clock, and provide 24 more hours of HVAC.



3. To change the setpoint, push the **WARMER** or **COOLER**. Notice that the word **Setpoint** will appear in the display. The first push will display the current setpoint, and any push thereafter will adjust the setpoint either up or down based on the button pushed. The standard setpoint range is from 68 to 74.

